


RA Extension Kit


ASSEMBLY INSTRUCTIONS

Install this plate on the RA axis assembly using the four 1/4-20 stainless socket cap bolts.

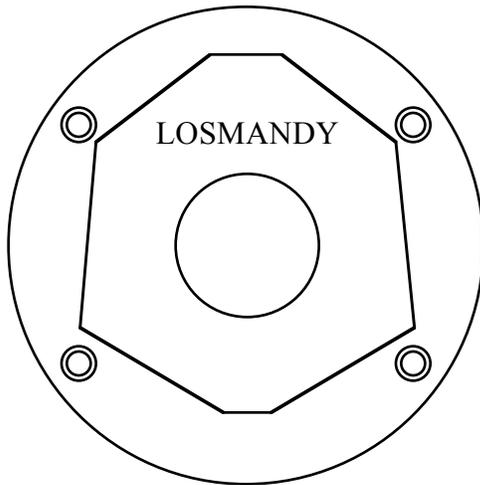

**RA
SIDE**


Attach this plate to the DEC axis assembly using four 1/4-20 stainless socket cap bolts. The two T-bolts must be on the same side as the clutch knob & weight shaft.

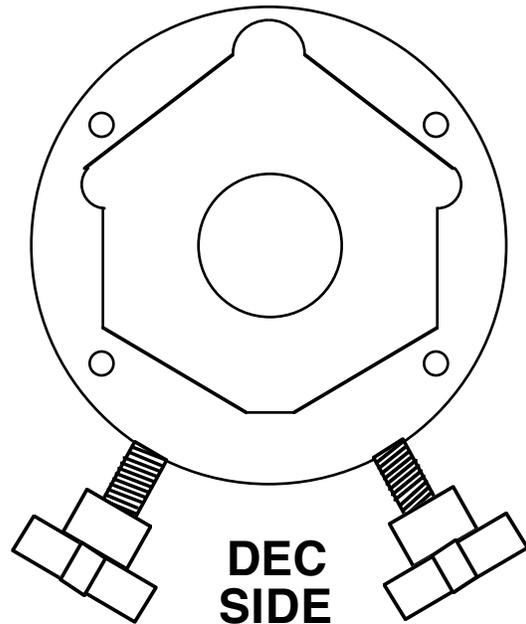

**DEC
SIDE**

Orient the RA plate with **LOSMANDY** at the top and tighten the clutch. With the two T-bolts at the bottom, place the DEC assembly onto the RA plate. Tighten the two bolts securely.

Remove the dovetail clamp on the DEC assembly. Attach the DEC saddle riser plate with two 5/16-18 3/4 inch socket cap bolts. Note the orientation of the offset holes and the small crescent. Re-attach the DEC dovetail so that the knobs are on the crescent side of the riser.

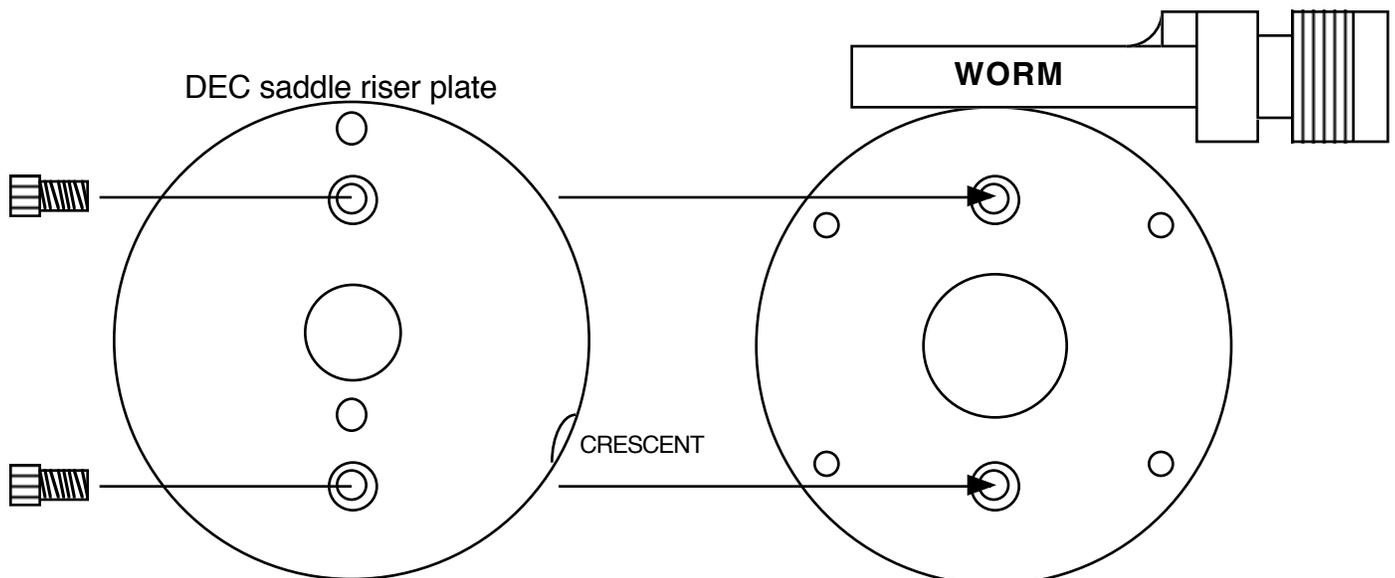

For more information and videos please go to www.losmandy.com